

BEDIENUNGSANLEITUNG - OPERATING INSTRUCTIONS - NOTICE D'UTILISATION



BT180000

- 4in1 Universal Werkbank
- 4in1 universal workbench



Introduction

Dear customer!

We are very pleased that you decided to purchase this product from kstools. Thank you for your confidence in us. You can find all the information you need in these operating instructions. Please read the instructions completely with care and observe the advice given. The operating instruction is part of the item and should be kept intact.

If you have any uncertainties or further questions, please contact: customerservice@kstools.com

1. Provisions for use

The manufacturer is not liable for personal injuries and material damages which result from improper use.

2. Technical data

WEIGHT CAPACITIES:

Do not exceed the following weight capacities:

Mode	Weight Capacity
Workbench	150 kg
Work platform	150 kg
Dolly	120 kg
Creeper	120 kg

3. Safety and usage instructions

Important safety instructions

TO REDUCE THE RISK OF INJURY, READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE USING THIS PRODUCT. FAILURE TO FOLLOW ALL INSTRUCTIONS BELOW MAY RESULT IN SERIOUS PERSONAL INJURY.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

GENERAL SAFETY INSTRUCTIONS

Do not store this product outdoors or in a humid environment, as this may cause damage to the product.

When using this product in the work platform mode, keep your feet firmly planted in the center of the platform. Do not step on the four corners of the product surface, as this may cause the product to tip over and result in personal injury.

When using this product in the work platform or workbench modes, place objects in the center of the product's surface. Placing objects on the corners may cause the product to tip over.

When extending or retracting the legs, do not use excessive force, as this may damage the product.

Before using this product, make sure that the legs are firmly locked in position and the latches are closed tightly over the top panel.


Do not use or alter this product for any purpose other than specified in this manual.

When using this product with power tools, refer to the manufacturer's instructions for how to properly use electric tools. Always wear safety goggles.

Tools may in principle only be used for the purpose intended, under the conditions envisaged and within the limitations as to their use.

A line drawing showing the rear of the device with a power cord plugged into a port. The device has a grid-like pattern on its back panel.


CAUTION: Do not step or stand on the work surface in creeper mode.

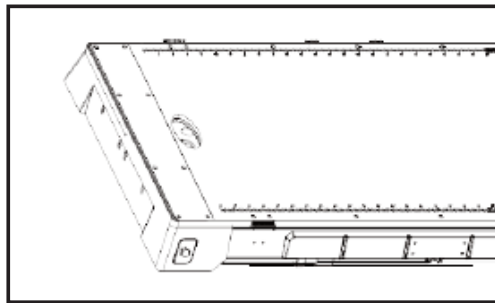


CAUTION: Do not step or stand on the work platform surface in dolly mode.

CREEPER /DOLLY MODE TO WORKBENCH MODE

 NOTE: You must pull out the spring loaded locking pins when opening the legs. Otherwise they will be damaged and may not open.

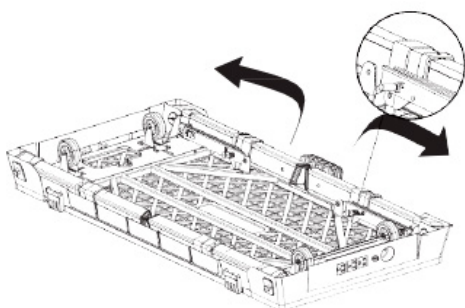

CAUTION: Make sure the spring button on each leg clicks out before using the product. Failure to do so may result in the legs retracting during use.

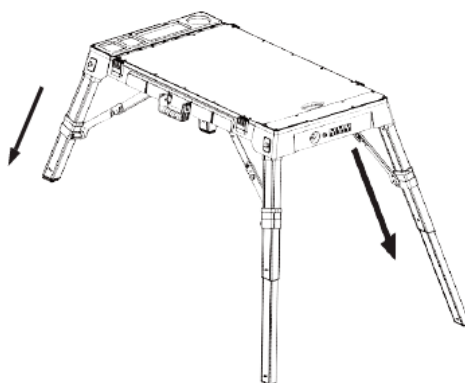




WORKBENCH MODE TO WORKPLATFORM MODE


1. Press in the spring button on each leg and slide the leg in.



2. Open the four latches on the sides (two latches per side).

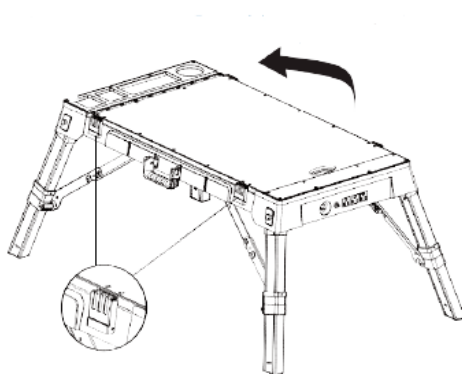

3. Remove the panel, turn it over so that the anti-slip work platform surface is face up, and place it back onto the platform. Re-fasten all four latches.

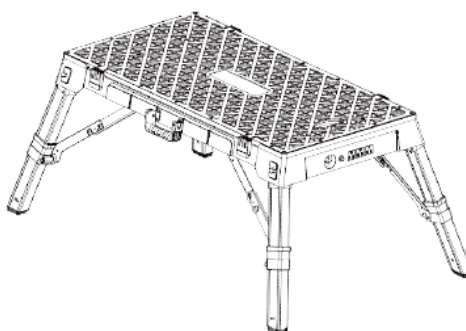

5. Maintenance

Incorrect or defective replacement parts can lead to damage.

6. Checks

All tools are to be checked for damage.

7. Disposal

The tool is to be disposed of or recycled in accordance with the legislation of the respective country.

8. Guarantee

The KS Tools Werkzeuge und Maschinen GmbH guarantee applies for all tools that are used under normal usage conditions.

The following are excluded from the guarantee:

- **Consumables** e.g. any type of cutting tools, cutting inserts and disks, cutting and scraping tools, brooms, brushes, files, batteries, bits or bit sockets, rotor blades in pneumatic devices, isolators on heating coils, any type of fuses, carbon brushes, etc.
- **Faulty functioning** of parts that show usage-related or other natural wear and tear, as well as tool defects that can be traced back to usage-related or other natural wear and tear.
- **Defects** in the tool that can be traced back to a failure to observe the operating instructions, improper use, use under abnormal environmental conditions or unsuitable operating conditions, overloading or improper maintenance. Also defects in tools caused by the use of accessory parts or other parts that are not KS Tools original parts.
- Tools which have been modified or equipped with additions.
- Minor deviations from the intended quality that are however insignificant for the value and suitability for use of the tool.

The guarantee period is 12 months in cases of industrial or equal use.

The guarantee period starts on the date of purchase by the commercial end customer. The date of the original purchase receipt is decisive. For technical products with limited guarantee types A, B and C, the user must principally submit the purchase receipt in addition to the serial number of the device, if present.

The guarantee applies under consideration of the guarantee type for the duration specified in the price list valid on the day the product was purchase.

If no guarantee claim exists for the product (expiration of the guarantee time, guarantee exclusion for the reasons listed in Sec. 2) but the repair is still possible, this will only be carried out following approval of the cost estimate by the user.