

## BEDIENUNGSANLEITUNG - OPERATING INSTRUCTIONS - NOTICE D'UTILISATION



### BT180010

-  Unterstellböcke mit Schnellentriegelung, 2-tlg.
-  Axle Stands with quick release function, 2 pcs
-  Chandelles avec déverrouillage rapide, 2 pièces



## Introduction

Dear customer!

Thank you for buying one of our products. You can find all the information you need in these operating instructions.

Please read the instructions completely with care and observe the advice given. The operating instruction is part of the item and should be kept intact. The manufacturer is not liable for personal injuries and material damages which result from improper use.

## 1. Provisions for use


Axle stands are used to secure vehicles in the raised position.

The manufacturer shall not be held liable for personal and/or material damage which can be traced back to unintended use of the tool.

## 2. Technical data

| Model    | nominal load (kg) | height min. (mm) | height max. (mm) | floor area (mm) |
|----------|-------------------|------------------|------------------|-----------------|
| BT180010 | 2000 kg           | 278 mm           | 431 mm           | 195 x 180 mm    |

|                 |                               |
|-----------------|-------------------------------|
| H:              | 278–431 mm                    |
| B1:             | 195 mm                        |
| B2:             | 180 mm                        |
| [1] Saddle:     | 86x23,5 mm                    |
| [2] Rackstrip:  | 29x25 mm                      |
| [3] Safety pin: | 13,4x12,8 (triangle) x L60 mm |
| [4] Angle bar:  | ∅ 2                           |
| [5] Base bar:   | ∅ 2                           |
| [6] Handle:     | Ø 14 mm                       |
| [7] Foot plate: | 48x48 mm (triangle), 83 mm    |

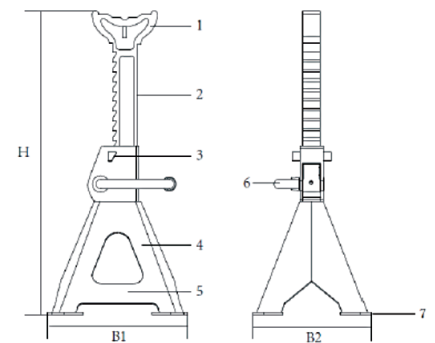

## 3. Safety and usage instructions

Read these operating instructions in full and keep them for reference.

Please observe the following instructions to avoid malfunctions, damage and adverse health effects:



Attention!

Failure to follow the warnings can result in the load slipping, damage to the axle stands and/or unsatisfactory operation, which lead to personal injury or damage to property.

- Persons with reduced physical, sensory or mental abilities are not allowed to use the axle stands, unless they are supervised and instructed by a responsible person.
- Keep uninvolved persons away from the axle stands and the load to be lifted.
- Do not use the axle stands as ladders, stools or the like. Always place the axle stands on a firm, level surface and ensure that they are standing securely.
- Do not load the axle stands beyond their maximum load capacity (see technical data) per piece.
- Secure the load to be lifted to prevent it from rolling away and tipping over.
- Do not use damaged axle stands.




- It is not permitted to work under lifted loads unless they are secured by suitable means (e.g. axle stand).
- Please support the lifted load immediately with the axle stand.
- Always place the load in the middle of the saddle (1). Tools may only be used according to their intended purpose under the intended conditions and within the limits of use.

Tools may in principle only be used for the purpose intended, under the conditions envisaged and within the limitations as to their use.

## 4. Operation


### Method of operation

- Refer to the vehicle owner's manual regarding proper positioning of the axle stands.
- Only position the axle stands in the locations specified in the vehicle owner's manual.
- Check for cracks, broken welds and missing and/or damaged parts before each use. Never use a damaged axle stand.

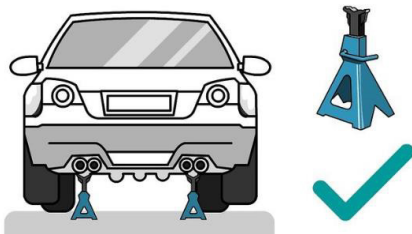

### Adjusting the axle stands

- Release the lever (4) to unlock the centre column (2), and set the height as desired by pulling out the centre column (2).
- By lowering the lever (4), the safety bolt (3) is fastened in the teeth of the centre column (2). Make sure that the safety bolt (3) is fastened completely!
- Slowly lower the load onto the axle stands.

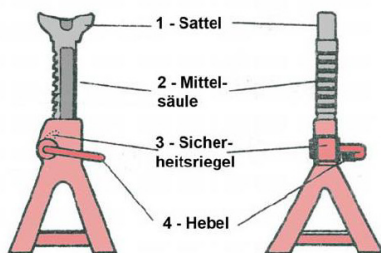

## 5. Cleaning and storage

Check the axle stands regularly (recommendation: every 3 months). Clean dust and dirt from the axle stands only with a slightly damp cloth or a hand brush.

Do not use harsh cleaners or aggressive chemicals for cleaning.

Incorrect use of the axle stands can lead to danger, consequently no adjustments are allowed to be made to the axle stands.



## 6. Maintenance

Maintenance and repair should only be carried out by qualified personnel.  
Incorrect or defective replacement parts can lead to damage.

## 7. Checks

All tools are to be checked for damage.

## 8. Disposal

The tool is to be disposed of or recycled in accordance with the legislation of the respective country.

## 9. Guarantee

The KS Tools Werkzeuge-Maschinen GmbH guarantee applies for all tools that are used under normal usage conditions.  
The following are excluded from the guarantee:

- **Consumables** e.g. any type of cutting tools, cutting inserts and disks, cutting and scraping tools, brooms, brushes, files, batteries, bits or bit sockets, rotor blades in pneumatic devices, isolators on heating coils, any type of fuses, carbon brushes, etc.
- **Faulty functioning** of parts that show usage-related or other natural wear and tear, as well as tool defects that can be traced back to usage-related or other natural wear and tear.
- **Defects** in the tool that can be traced back to a failure to observe the operating instructions, improper use, use under abnormal environmental conditions or unsuitable operating conditions, overloading or improper maintenance.  
Also defects in tools caused by the use of accessory parts or other parts that are not KS Tools original parts.
- Tools which have been modified or equipped with additions.
- Minor deviations from the intended quality that are however insignificant for the value and suitability for use of the tool.

The guarantee period is 12 months in cases of industrial or equal use.

The guarantee period starts on the date of purchase by the commercial end customer. The date of the original purchase receipt is decisive. For technical products with limited guarantee types A, B and C, the user must principally submit the purchase receipt in addition to the serial number of the device, if present.

The guarantee applies under consideration of the guarantee type for the duration specified in the price list valid on the day the product was purchased.

If no guarantee claim exists for the product (expiration of the guarantee time, guarantee exclusion for the reasons listed in Sec. 2) but the repair is still possible, this will only be carried out following approval of the cost estimate by the user.

